



1 Content: 1 Trailer frame / container, 1 front wheel, 2 rear wheels, 1 removable handle.



2 Insert rear wheel axel into the frame receiver till it clicks, press the lock to allow proper locking. Check both wheels are securely locked by pulling. It might be necessary to disengage the foot brake.



3 Insert front wheel axel into the frame.



4 Insert the security pin into the locking hole and turn till securely locked.



5 Open the handle clamp by turning the hand screw and attach the handle to the frame.



6 Turn the hand screw on both sides of the handle to lock it securely to the frame.



7 Extend the side bars by pressing down the side locks on both sides of the frame and flip down the locks to secure both steel bars together.



8 Steps 8 to 11 are for bike trailer use only. Securely install the towing receptacle on the rear wheel axel as the picture shown



9 Unlock the towing bar by pulling the security pin under the stroller frame



10 Extend the towing bar by flipping it around and insert the security pin on the left side hole and lock it securely.



11 Attach the towing bar into the towing receptacle and lock it with security pin. Secure it with safety strap as shown.

Folding Steps



Unlock the side bar locks on both sides for folding.




Release the rear wheel lock for removal.



Folding down the stroller.



Flip up the locking tab to lock the front wheel for going straight line or flip down to allow turning.

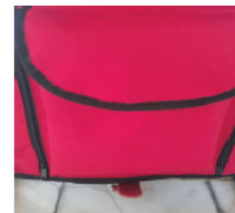

Foot brake disengaged for free moving.



Foot brake engaged for stopping.